

JETSTREAM XT 270° AWNING SETUP GUIDE

This premium, wrap-around awning provides complete shade and all-weather protection over both the side door and the rear kitchen galley. For the most efficient setup, a two-person installation is recommended.

STEP-BY-STEP DEPLOYMENT

STEP 1: RELEASE THE TRAVEL COVER

1.1 Unzip the Protective Bag: Unzip the heavy-duty PVC travel casing mounted along the roofline of the trailer.

1.2 Release the Retention Straps: Unbuckle the interior security straps holding the awning.




STEP 2: DEPLOY THE 270° AWNING CANOPY

2.1 Swing in a Continuous Arc: Grasp the leading edge of the outer awning arm.




2.2 Swing Arm Backwards: Walk backward, swinging the frame outward in a continuous 270-degree arc away from the side of the trailer, moving completely around to the rear of the vehicle.

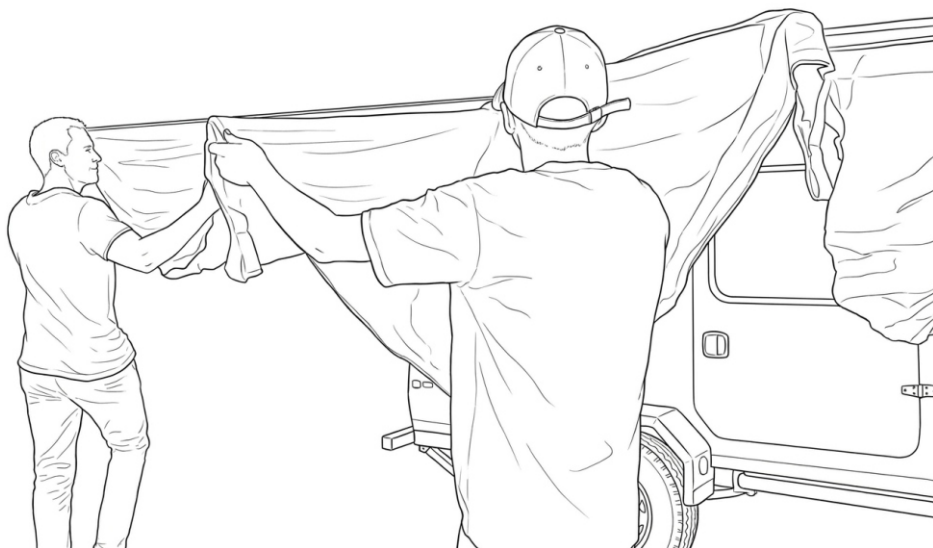


STEP 3: RELEASE THE TENSIONING STRAP

3.1 Unclip the Retention Strap: Find and unclip the retention strap buckle that releases the retention strap attached to the trailing end of the framework.

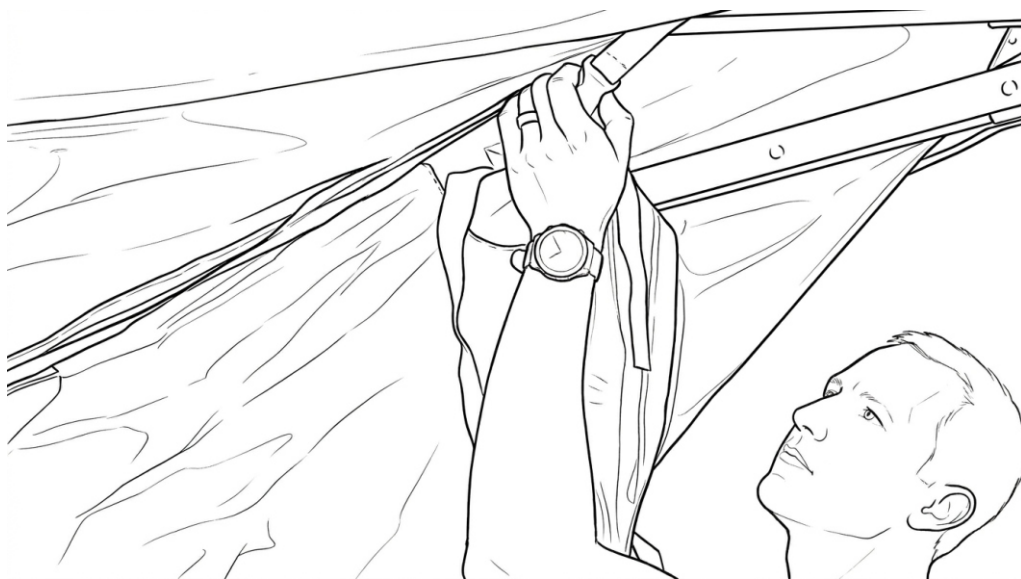


STEP 4: ANCHOR AND TENSION THE FRAMEWORK

Step 4.1 Secure to the Anchor Point: Pull the strap and secure its heavy-duty hook to the designated anchor point on the trailer's roof rack.

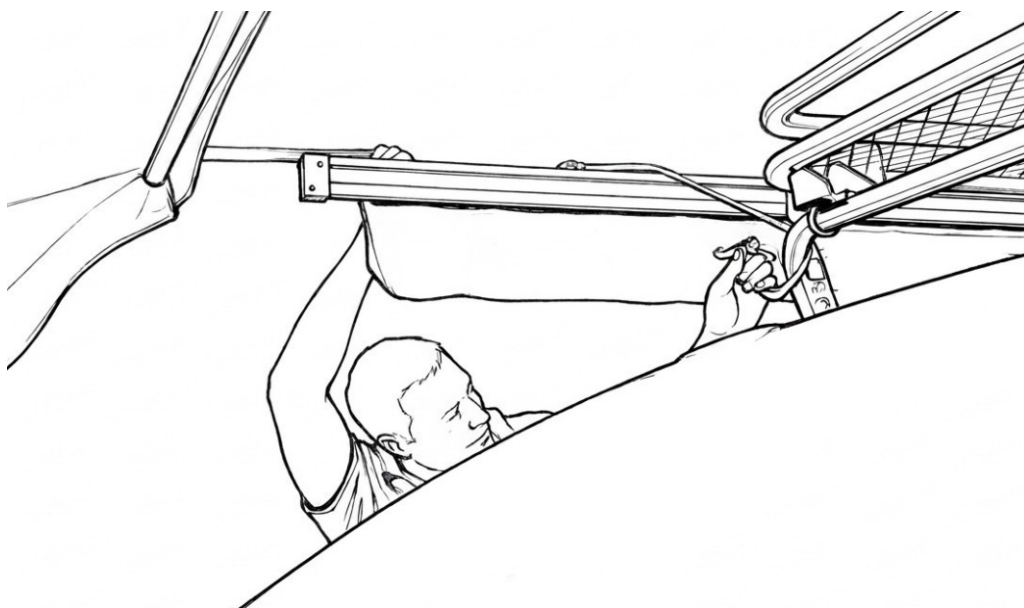


4.2 Tighten for Full Tension: Pull the adjustment strap firmly until the entire 270-degree canopy canvas is pulled tight across the frame.

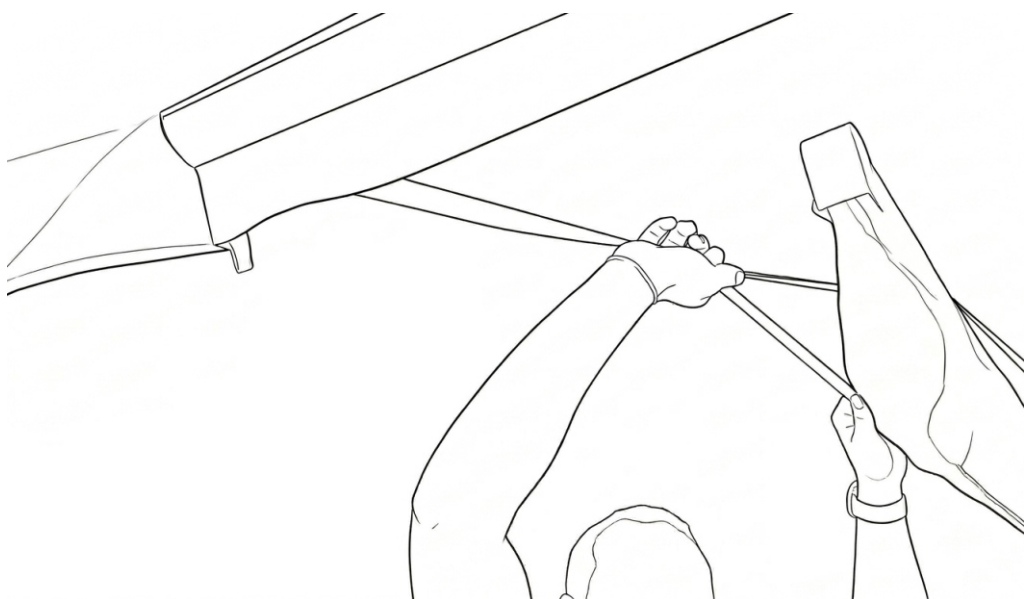


STEP 5: SET UP THE VERTICAL SUPPORT LEGS

5.1 Deploy Support Legs: Drop down the integrated vertical telescoping legs from their stowed positions within the outer structural frame rafters.

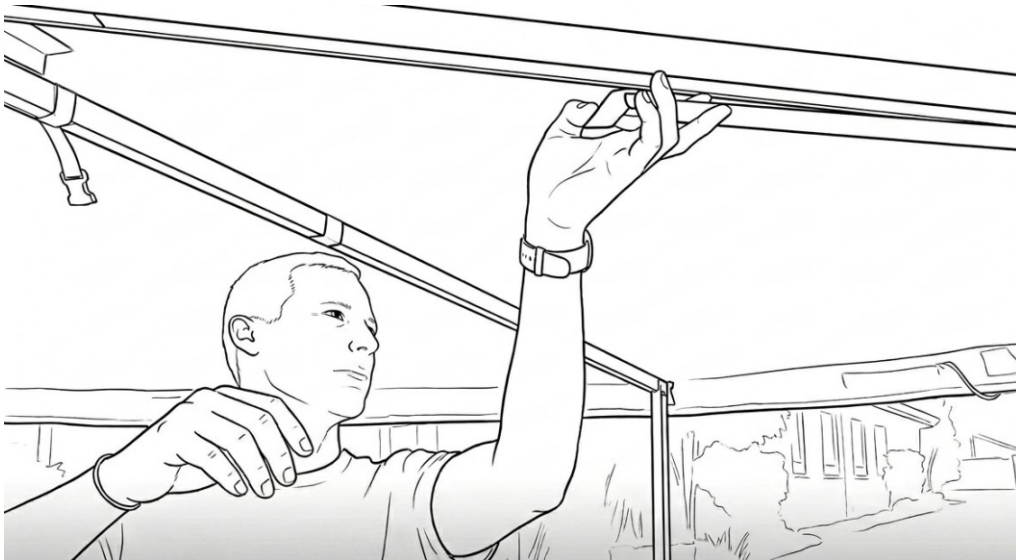


STEP 6: ADJUST AND LEVEL

6.1 Adjust and Level: Extend each leg downward until it firmly meets the ground. Twist or lever-lock the legs to secure the desired height, ensuring the entire awning structure sits level.

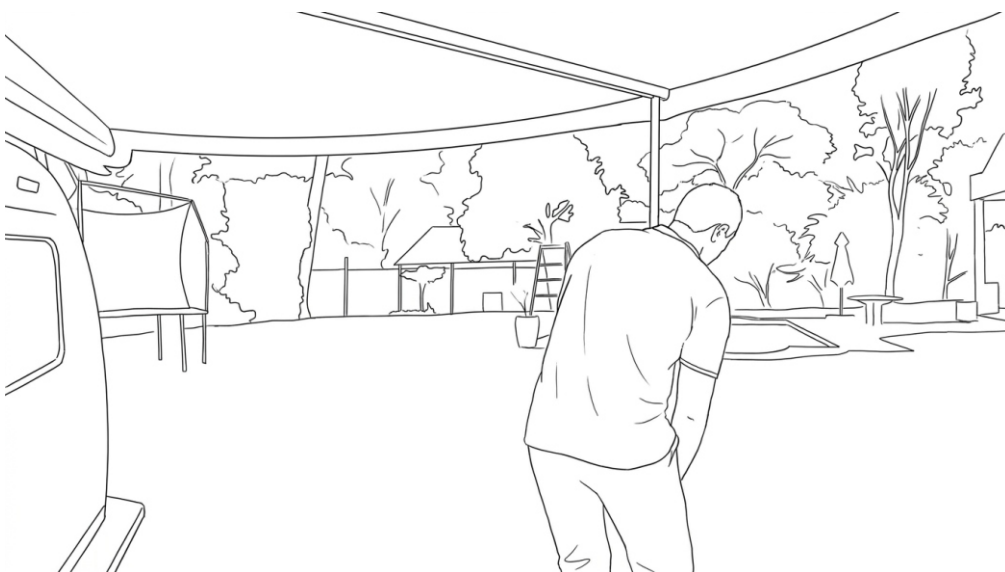


STEP 7: SECURE AWNING

7.1 Lock the Inner Brace: Engage the over-center cam latches on the inner structural rafters to fully lock the framework.

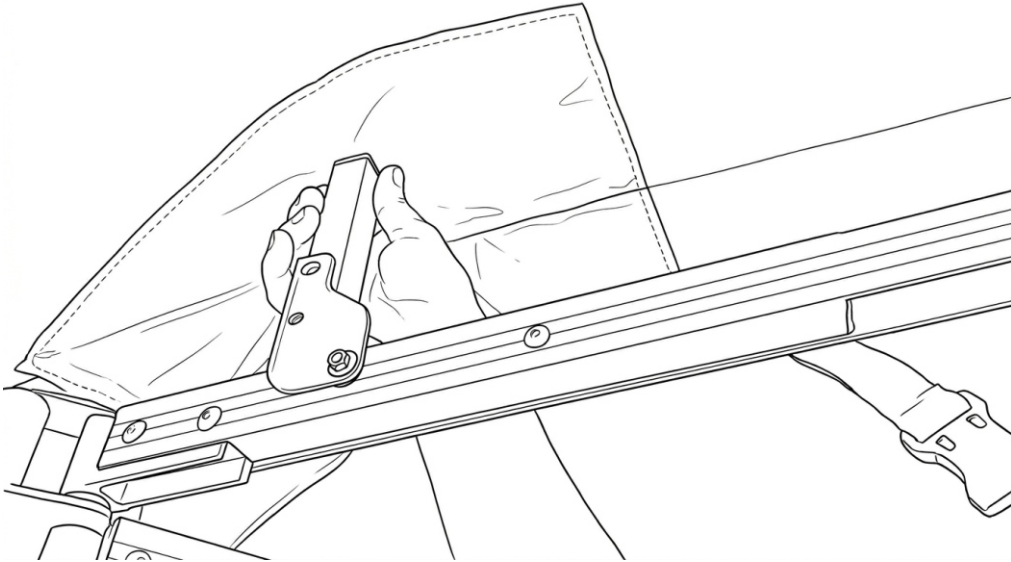


STEP 8: ANCHOR GUY LINES

8.1 Guy Ropes: Locate the secured guy ropes at the top of the vertical support legs. Pull the lines outward at a 45-degree angle and drive the ground pegs firmly into the turf.

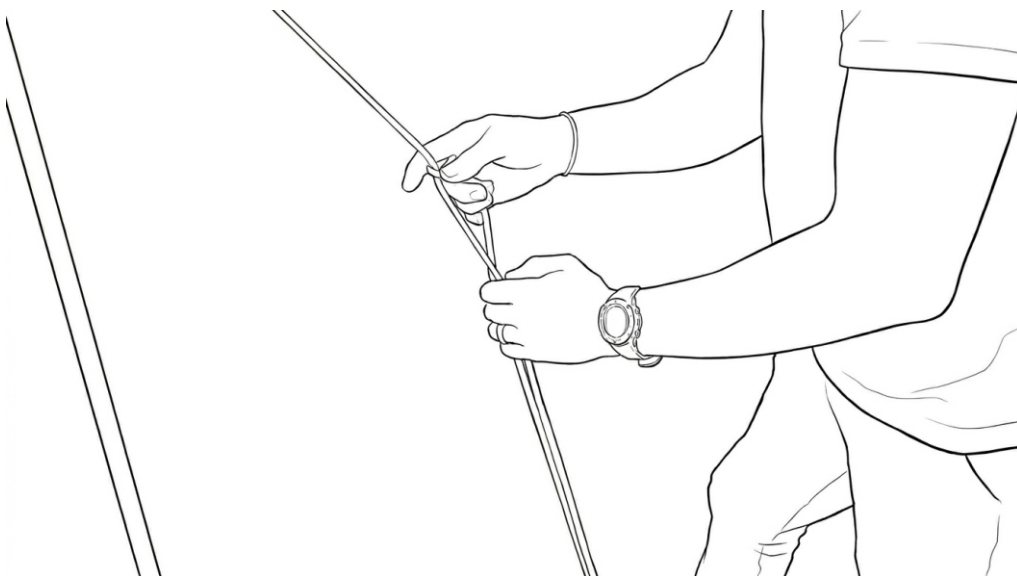

STEP 9: SECURE THE REAR GALLEY EXTENSION

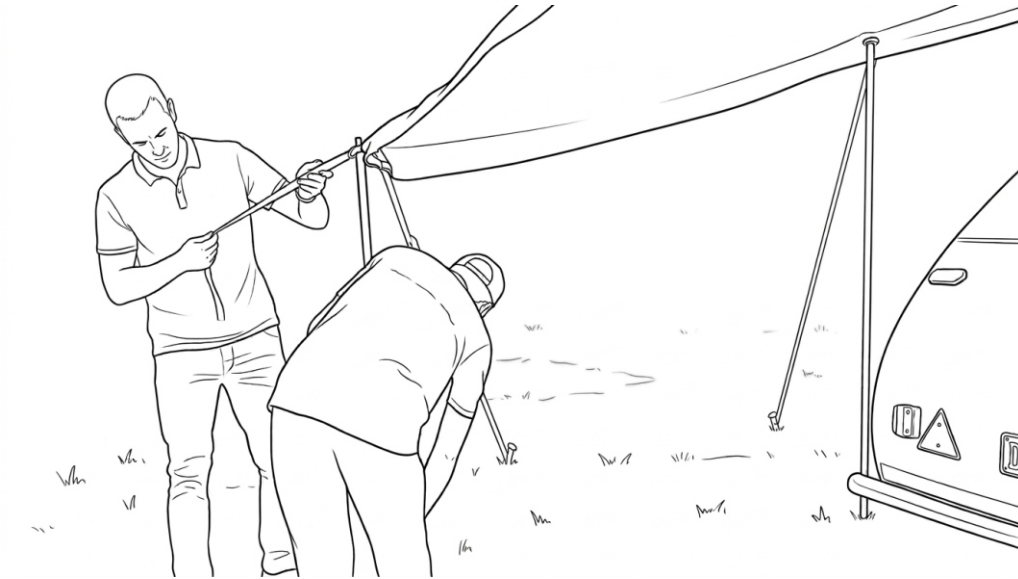

9.1 Insert Pole into Eyelet: Push the top pin of the vertical support pole straight up through the corner eyelet on the rear galley extension canvas.

9.2 Attach Guy Line: Loop the eyelet of the guy rope over the exposed pole pin protruding above the top of the canvas.

9.3 Stake and Tension: Pull the guy line outward at an angle away from the trailer, drive the ground peg firmly into the turf, and pull the rope taut to lock the pole upright and tension the rear galley canopy.